

Using the Wi-Fi option installed in the Xtrem module


The Xtrem Wifi module allows you to connect the scale to a local network. It can function simultaneously as an access point (AP) and as a station (STA) connected to an infrastructure router. It is delivered with both working modes activated.

When first used, only AP mode is functional, which has very limited range and capacity. To connect the equipment to your own local network, you will need to configure the connection parameters to the desired WiFi network. This configuration cannot be done using the K3X terminal. It can be done from two applications alternatively:

- PC-XTREM application for Windows systems, which can be downloaded at the following link: [PC-XTREM \(Windows\)](#)
- Android Xtrem application, which you can download for free at the following link: [Xtrem app Android](#)



In these instructions we will see how to configure the connection to a WiFi router using the application for Android devices.

1. Access the WiFi network settings of your Android device and select the WiFi network of your Xtrem scale. The initial SSID is GRAM_01, and the password is "12345678".
2. Within a few seconds of establishing the connection, a system notification will appear warning that the selected network does not allow internet access. Tap on this notification to open the dialog window.
3. Confirm that you want to stay connected to the GRAM_01 network even if you don't have internet access. Some versions of Android may display an option to remember this preference: Turn on the option to remember this preference to avoid these steps each time you connect to the scale's own access point.

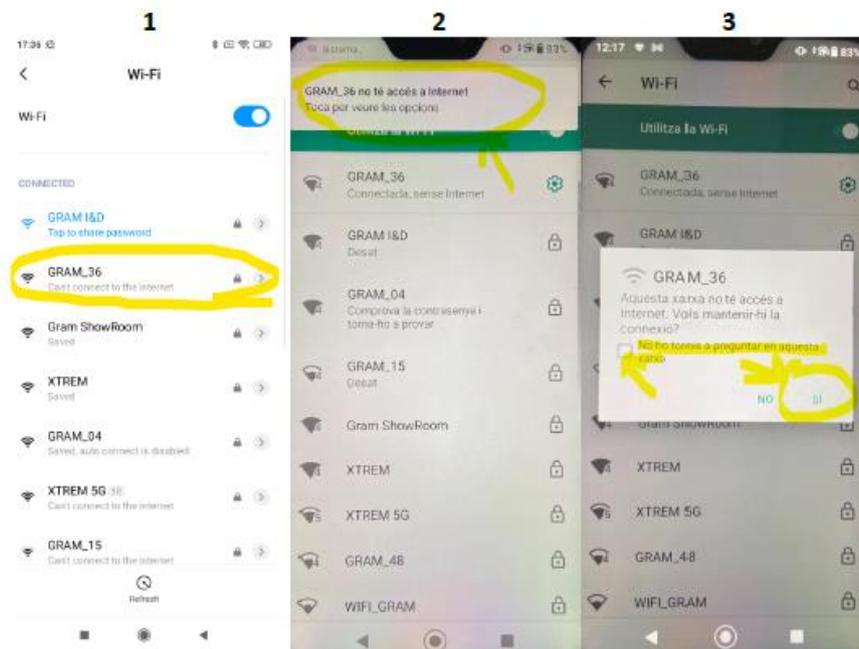


When opening the app for the first time, a screen with no connection to any scale appears:

Tap the top left corner to set up connection with an Xtrem scale

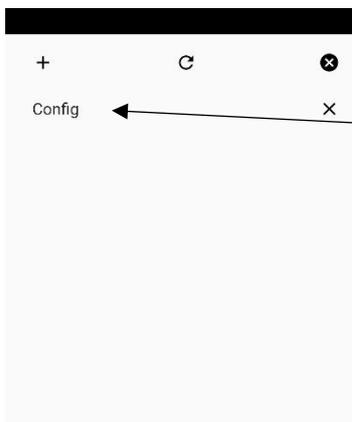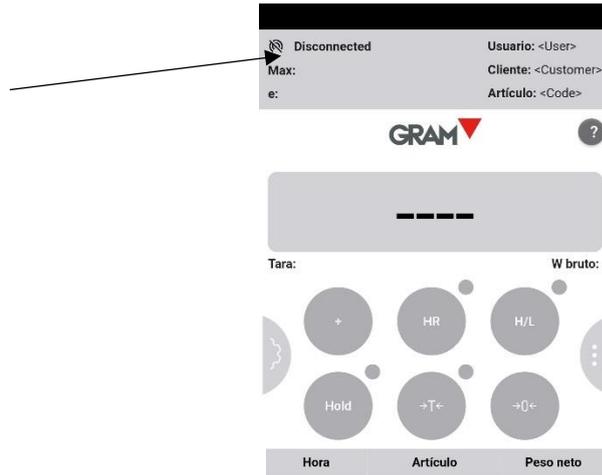


The connection screen will open, allowing you to save the connection settings to different Xtrem scales.


Once connected to the scale, you can access the scale's configuration options by touching the button in the middle of the left side of the screen.

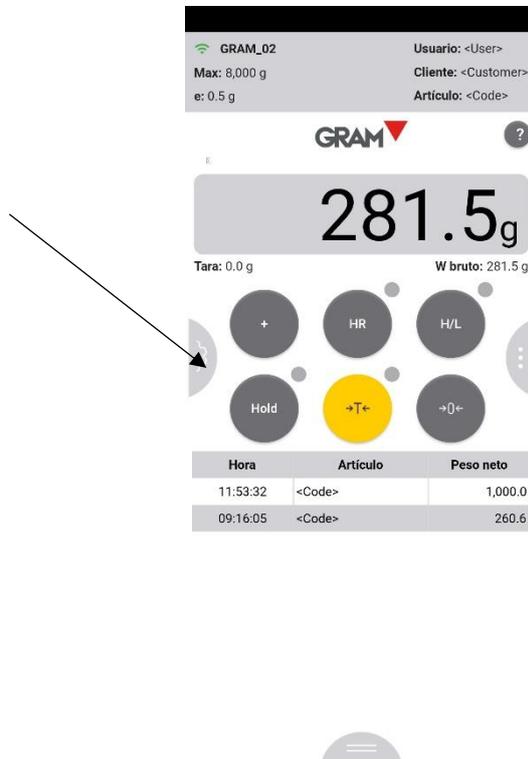

In this settings screen you will find the options to configure the connection of the Xtrem scale to a WiFi network:

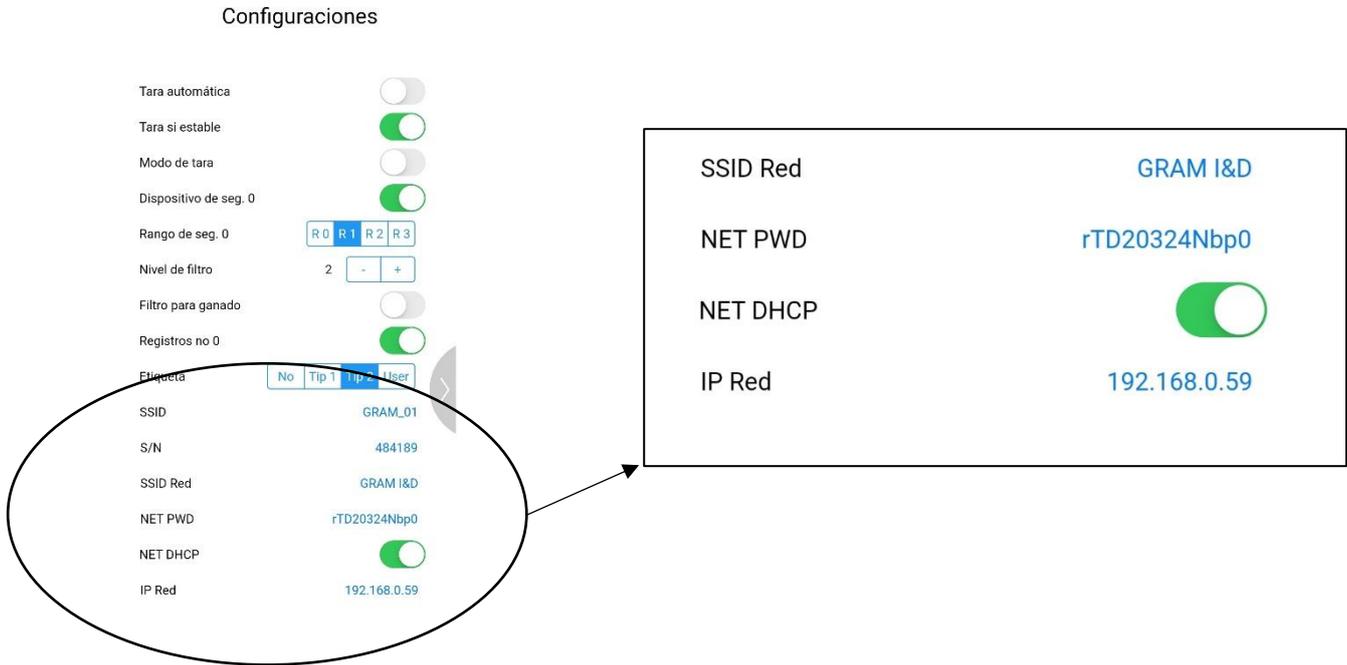

To edit any of these values, tap the label with the content of the desired setting.

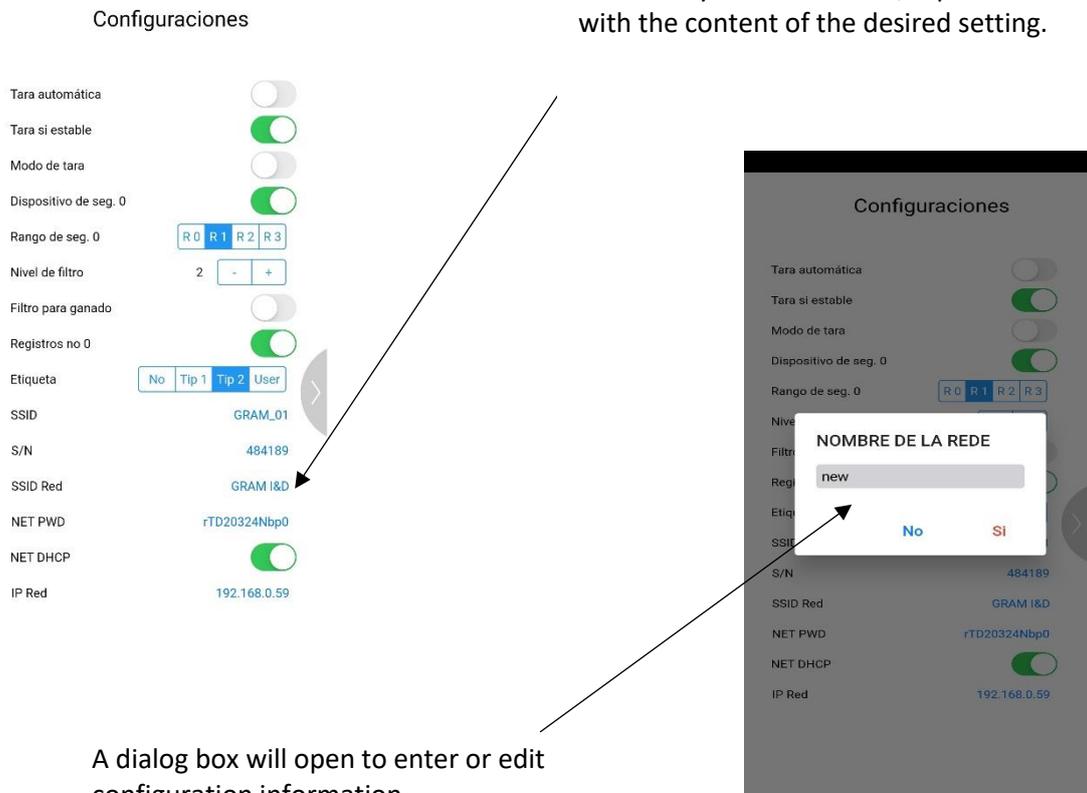

A dialog box will open to enter or edit configuration information

Configuration options for connecting the scale to a WiFi network:

Net SSID	Name of the WiFi network to which the scale should connect.
NET PWD	WiFi network access password
NET DHCP (on / off)	Dynamic assignment of the IP address of the scale once connected to the network.
IP address	IP address of the scale to enter if you prefer a static IP assignment (NET DHCP disabled)

Once the desired configuration options have been modified, they will not take effect until the next reboot of the scale. That is, for them to be effective, it is necessary to turn the scale off and on again.